

All City Party Supply
1600 Cherry Ave Long Beach, Ca 90813
562.438.8700

BOUNCE HOUSE WARNING RULES

These warning rules should be followed at all times to avoid injury. Adult supervision is required at all times!

1. Remove all shoes, eyeglasses and sharp objects.
2. Diving, wrestling, rough play and flips are prohibited.
3. NO food, drinks, gum, candy, pets or SILLY STRING are allowed. If silly string is found there will be a \$1000.00 damage fee charged.
4. Riders with mental or physical impairments should not be allowed to use the inflatable without the supervision of a qualified attendant.
5. Exit if the unit begins to deflate or lose air. Use exit doors and escape hatches.
6. DO NOT use and immediately deflate the inflatable in winds exceed 15 MPH and/or it rains.
7. Riders SHOULD all be compatible age and size.
8. The inflatable must be secured tied down at all times. If it becomes untied do not use the inflatable and call our office.
9. Keep children away from the blower at all times.
10. Bounce away from each other and away from the sides or walls.
11. Do not jump off or bounce off the jumper when getting off. Do not climb on the roof.
12. Riders should slide down feet first from all slides. Only one rider should slide down at each single time.

TROUBLESHOOTING BLOWER NOT WORKING

1. Blower's suction vent is blocked by either an object such as a trash bag, leaves or the blower has been knocked down or the vent is next to the jumper and the vent is blocked from sucking in air.
2. Air tubes have been tangled or straps are loose around the blower.
3. Zippers or Velcro openings are open.
4. Use of extension cords longer than 50' are not suggested.
5. Electrical breakers are tripped. Check the circuit box at home or the circuit breaker buttons on the generator.
6. Blower has been turned OFF the plug has been unplugged.
7. Do not use other appliances or other electrical items on the same outlet.
8. If using a generator please make sure it's at least 4000 watts.